

 PREPARED BY:
 AEMO Markets

 DOCUMENT REF:
 T6.0

 VERSION:
 76.0

 EFFECTIVE DATE:
 6 February 20221-December 2017

 STATUS:
 Initial DraftFINAL

#### Approved for distribution and use by:

 APPROVED BY:
 Peter Geers

 TITLE:
 Chief Strategy and Markets Officer

DATE:

[TBA] 2019

Australian Energy Market Operator Ltd ABN 94 072 010 327

www.aemo.com.au info@aemo.com.au

NEW SOUTH WALES QUEENSLAND SOUTH AUSTRALIA VICTORIA AUSTRALIAN CAPITAL TERRITORY TASMANIA WESTERN AUSTRALIA

Australian Energy Market Operator Ltd ABN 94 072 010 327 NE Australian Energy Market Operator Ltd ABN 94 072 010 327 www.aemo.com.au info@aemo.com.au www.aemo.com.au info@aemo.com.au

NEW SOUTH WALES QUEENSLAND SOUTH AUSTRALIA VICTORIA AUSTRALIAN CAPITAL TERRITORY TASMANIA



## VERSION RELEASE HISTORY

Version	Effective Date	Summary of Changes
	16/07/2006	Added changes agreed as part of the CATS 2.4 MSATS Procedures: CATS Procedures Part 1 Principles and Obligations Version 2.4 that were missed from version 4. This includes the removal of the zero first character row from the consumption energy Data Suffix table.
		Added Amps to the Volts row of Table 1. Updated diagrams to a consistent format.
		Added diagrams of twin element interval meters at sections 12.4 and 12.5. Removed diagram of accumulation and interval metering at a site.
		Amendments to reflect changes developed as part of the Metrology Harmonisation project, including the development of the NEM Metrology Procedure.
		Relocated version history.
		Minor typographical amendments and corrections.
	August 2009	Update to AEMO format
6.0	01 Dec 2017	<ul> <li>Updated to incorporate changes resulting from:</li> <li>National Electricity Amendment (Expanding competition in metering and related services) Rule 2015. No.12;</li> </ul>
		National Electricity Amendment (Embedded Networks) Rule 2015 No. 15; and National Electricity Amendment (Meter Replacement Processes) Rule 2016 No. 2.
<u>7.0</u>	<u>6 February 2022</u>	Updated to incorporate: National Electricity Amendment (Five Minute Settlement) Rule 2017 No. 15 and National Electricity Amendment (Global Settlement and Market Reconcilliation) Rule 2018 No 14



## CONTENTS

1.	INTRODUCTION	5
1.1.	Purpose and Scope	5
1.2.	Definitions and Interpretation	5
1.3.	Related AEMO Documents	5
2.	ALLOCATION AND ISSUE OF NMIS	5
2.1.	NMI Allocation by AEMO	5
2.2.	Issue of NMIs by LNSPs and ENMs for Types 1-6 Metering Installations	6
2.3.	Allocation of NMIs for Type 7 Metering Installations	6
2.4.	Allocation of NMIs for non-contestable unmetered loads	7
<u>3.</u>	NMI STRUCTURE	7
<u>4.</u>	NMI REGISTERS	8
<u>5.</u>	NMI CHECKSUM	8
<u>6.</u>	DATASTREAM SUFFIX	9
6.1.	General	9
<u>6.2.</u>	Energy Direction Flows	9
7.	DATASTREAM SUFFIX FOR INTERVAL METERING DATA	10
7.1.	Datastream Suffix for Accumulated Metering Data	11
<u>7.2.</u>	Wholesale and Bulk Supply Connection Points	12
8.	CONNECTION POINTS WITH CHECK METERING	12
9.	NMI RULES	13
9.1.	NMI Allocation and Verification	13
<u>9.2.</u>	NMI Extinction	13
APPE	NDIX A. EXAMPLES OF NMI APPLICATION – INTERVAL METERING DATA	15
A.1	One End User metered on the secondary side of transformer	15
<u>A.2</u>	One End User, multiple metered on the secondary side of transformer	16
A.3	One End User, previously two tariff metering, e.g. general supply & off-peak on secondary side or	f
	transformer	16
<u>A.</u> 4	One End User, two controlled loads, one twin element meter	17
<u>A.5</u>	One End User, two twin element meters	17
<u>A.6</u>	One End User, multiple meters on secondary side of multiple transformers in the same substation	<u>1</u>
	building an LV switchboard in common switchroom	18
<u>A.7</u>	Three End Users, metered on secondary side of multiple transformers in the same substation	
	building	18
<u>A.8</u>	One End User, two separate HV supplies to two separate substations, both metered on secondar	У
	side of the transformers	19

Doc Ref:

6 February 20221 December 2017

Page 3 of 36





<u>A.9</u>	One End User, two separate substations adjacent to each other or one single substation with two	
	separate transformers in a single substation, with a "normally open" point separating the HV	
	supplies into two sources	20
<u>A.10</u>	One End User, two separate substations adjacent to each other or one single substation with two	
	separate transformers, with the HV supply originating from a single source	20
<u>A.11</u>	One End User, two separate substations not adjacent to each other but on same premises	21
<u>A.12</u>	Multiple End Users, High rise building	22
<u>A.13</u>	One End User with multiple supply points	23
<u>A.14</u>	One End User with Standby Supply	24
<u>A.15</u>	One End User or Participant, Wholesale Metering at Transmission Node	25
<u>A.16</u>	One End User or Participant, Wholesale Metering at Transmission Node	25
<u>A.17</u>	One End User, Wholesale Metering at Transmission Node	26
<u>A.18</u>	Street Lighting (Type 7 Metering Installation)	27
<u>APPE</u>	NDIX B. EXAMPLES OF NMI APPLICATION – ACCUMULATED ENERGY DATA	<u>29</u>
<u>B.1</u>	Single Meter with Single Datastream	29
<u>B.2</u>	Two Meters each with Single Datastream	29
<u>B.3</u>	Two Meter Installation, One Meter Recording Consumption for a Controlled Load	29
<u>B.4</u>	Three Datastream, One Meter with Single Measurement Element	30
<u>B.5</u>	Multi-function Meter	30
<u>B.6</u>	Two Multi-function Meters	31
<u>APPE</u>	NDIX C. SAMPLE JAVA CODE FOR NMI CHECKSUM	32
<u>APPE</u>	NDIX D. EXAMPLE OF NMI CHECKSUM CALCULATION	34

## TABLES

Table 1	Datastream Suffixes for Interval Metering Data	10
Table 2	Datastream Suffixes for Accumulated Metering Data	11
Table 3	Example NMI Results	<u>36</u>
Table 4	NMIs and NMI Checksums	<u>36</u>



#### 1. INTRODUCTION

#### 1.1. Purpose and Scope

This National Metering Identifier Procedure (Procedure) is an MSATS Procedure. It sets out the structure for *NMIs* to be used in the *NEM*, details Datastreams for each category of *metering installation* and addresses the matters contemplated in clauses 7.8.2(d)(2), and 7.8.2(ea) (eb) & (ec) of the NER.

The successful operation of the NEM relies on:

- positive identification of *connection points*,
- a verifiable linkage between connection points, NMI Standing Data and metering data, and
- an audit trail for metering data collection and processing.

The *NMI* is a unique identifier for each *connection point*, an index against which other essential data can be managed. It is crucial to the accurate management of End User registration and transfer, *connection point* change control and data aggregation and transfer.

#### 1.2. Definitions and Interpretation

The Retail Electricity Market Procedures – Glossary and Framework:

- (a) is incorporated into and forms part of this document; and
- (b) should be read with this Procedure.

#### 1.3. Related AEMO Documents

Title	Location
Retail Electricity Market Procedures – Glossary and Framework	http://aemo.com.au/Electricity/National-Electricity- Market-NEM/Retail-and-metering/Glossary-and- Framework
MSATS Procedures	http://aemo.com.au/Electricity/National-Electricity- Market-NEM/Retail-and-metering/Market-Settlement- and-Transfer-Solutions
Metrology Procedure Part A	http://aemo.com.au/Electricity/National-Electricity- Market-NEM/Retail-and-metering
NMI Allocation List	http://aemo.com.au/-/media/Files/PDF/NMI-Allocation- List-v8-December-2014.ashx

### 2. ALLOCATION AND ISSUE OF NMIS

#### 2.1. NMI Allocation by AEMO

- (a) NMIs are allocated by AEMO for issue by LNSPs (for connection points) or ENMs (for child connection points) in accordance with this Procedure.
- (b) Blocks of available *NMIs* are allocated to LNSPs by AEMO in accordance with the NMI Allocation List.
- (c) Blocks of available *NMIs* are allocated and reserved for ENMs by AEMO.
- (d) An ENM must apply to AEMO for a *NMI* prior to assuming responsibility for a *child connection point*. AEMO will issue a *NMI* to the ENM for that *child connection point*.

Doc Ref:

Page 5 of 36



- (e) AEMO may allocate blocks of *NMIs* to LNSPs and ENMs from any unused range.
- (f) The range 5 XXX XXX XXX has been reserved for use in the gas industry.
- (g) The range 9 XXX XXX XXX has been reserved as a "break-out" if it becomes necessary to move to an 11 character *NMI*.

#### 2.2. Issue of NMIs by LNSPs and ENMs for Types 1-6 Metering Installations

- (a) For each new *connection point* the FRMP must apply to the relevant LNSP for a *NM*/ prior to assuming responsibility for the *connection point*, and the LNSP must issue a *NM*/ to the FRMP for that *connection point* from the LNSP's allocated list.
- (b) For each new *child connection point* the FRMP must apply to the relevant ENM for a *NM*/prior to assuming responsibility for the *child connection point*, and the ENM must issue a *NM*/ to the FRMP for that *child connection point* as provided by AEMO.
- (c) The LNSP or ENM (as applicable) must register the *NMI* for the *connection point* or *child connection point* (as applicable) in MSATS in accordance with the CATS and WIGS Procedures.
- (d) For distribution network connection points the LNSP must populate the LR field with "GLOPOOL".
- (c)(e) For *child connection points* the ENM must populate the LR field with the Parent FRMP Participant ID (this will be the ENLR).

#### 2.3. Allocation of NMIs for Type 7 Metering Installations

Schedule 7.4 of the NER and the Metrology Procedure: Part B establish the framework for type 7 *metering installations.* 

#### 2.3.1. Common Requirements across the NEM

- (a) Each type 7 *metering installation* applies to a unique combination of FRMP, End User, TNI, DLF, and LNSP.
- (b) The *NM*/may contain different agreed Unmetered Device *loads* or Unmetered Device types. One *NM*/is required for each type 7 *metering installation*. Individual Unmetered Device *loads* may be added to and removed from the *NM*/without the need to change the *NM*.
- (c) For each TNI there will be one or more *NMIs* representing municipal lighting *loads*, and several other *NMIs* representing the various utilities who have Unmetered Device *loads* in the geographic area serviced by the TNI.
- (d) New NM/s must only be created where one or more Unmetered Device loads with a unique and previously unregistered set of attributes (FRMP, End User, TNI, DLF, LNSP) are to be put into service.
- (e) A *NMI* may be abolished if the Unmetered Device *load* is removed (e.g. street turned into park, and lighting removed) or the Unmetered Device *load* is transferred to another *NMI*. (E.g. due to network re-arrangements).
- (f) A change of one attribute (FRMP, TNI, DLF, LNSP), or a change of End User, will not of its own require an abolition of the *NMI*.
- (g) The NER and Metrology Procedure: Part B provide for the allocation of *NMIs* to broad classes of Unmetered Device *connection points* provided that certain attributes required for *settlements* remain unique.

AEMO expects that each LNSP has a procedure for the allocation of *NMIs* for Unmetered Device supplies, which will be available for review by the Jurisdiction or AEMO on request.

Doc Ref:

6 February 20221 December 2017

Page 6 of 36



- (h) A procedure for the allocation of *NM/s* for street and public lighting across a geographic area must include the following steps:
  - (i) Define the geographic area supplied from a *transmission* node.
  - (ii) Subdivide the Unmetered Device supplies within this geographic area according to End Users. If necessary, sub-divide these Unmetered Device supplies to take account of variations of DLF that apply across the area.
  - (iii) If necessary, subdivide these Unmetered Device supplies according to FRMP.
- (i) When considering materiality, the LNSP may allocate streetlights by geographic area, or postcode, or by some other available grouping where the majority of that Unmetered Device *load* is supplied from a single *transmission* node.
- (j) Where distribution feeders are commonly supplied from one transmission node, but are regularly moved to another transmission node for maintenance or seasonal reasons, the Unmetered Device NMI can be recorded in MSATS against the transmission node through which the majority of the energy is delivered. This approach is supported by the fact that the calculation of marginal loss factors takes account of seasonal flows at transmission nodes, and that the marginal loss for adjacent TNIs where load sharing is possible are unlikely to be significantly different.

#### 2.4. Allocation of NMIs for non-contestable unmetered loads

- (a) Each *non-contestable unmetered load* applies to a unique combination of FRMP, End User, TNI, DLF, and LNSP.
- (b) The *NMI* may contain different agreed Unmetered Device *loads* or Unmetered Device types. One *NMI* is required for each *non-contestable unmetered load*. Individual Unmetered Device *loads* may be added to and removed from the *NMI* without the need to change the *NMI*.
- (c) New NM/s must only be created where one or more Unmetered Device *loads* with a unique and previously unregistered set of attributes (FRMP, End User, TNI, DLF, LNSP) are to be put into service.
- (d) A *NMI* may be abolished if the *non-contestable unmetered load* is removed or transferred to another *NMI*.
- (e) A change of one attribute (FRMP, TNI, DLF, LNSP), or a change of End User, will not of its own require an abolition of the *NMI*.
- (f) The NER and Metrology Procedure: Part B provide for the allocation of NMIs to broad classes of non-contestable unmetered loads provided that certain attributes required for settlements remain unique.

AEMO expects that each LNSP has a procedure for the allocation of *NMIs* for *non-contestable* unmetered loads, which will be available for review by the Jurisdiction or AEMO on request.

(a)(g) Where *distribution* feeders are commonly supplied from one *transmission* node, but are regularly moved to another *transmission* node for maintenance or seasonal reasons, the *non-contestable* <u>unmetered load NMI</u> can be recorded in MSATS against the *transmission* node through which the majority of the *energy* is delivered.

#### 3. NMI STRUCTURE

(a) Generally, the NM/ is an all numeric, ten (10) character identifier. The key attributes of a NM/ are:

 The *NMI* must embody only numeric characters, except as explicitly provided in this Procedure, and must not contain spaces.

Doc Ref:

6 February 20221 December 2017

Page 7 of 36





- (ii) Where alphanumeric characters are allowed, the letters "O" and "I" are not permitted in order to avoid confusion with the numbers 0 and 1.
- (iii) "W" is reserved as the fifth character of the allocated identifier for wholesale *transmission connection metering points* only. It may only be used if the *NMI* is allocated from an alphanumeric block.
- (iv) Embedded characters or meanings must not be used in allocating *NMIs*.
- (b) The *NMI* may be used in conjunction with other identifiers or suffixes. These include:
  - (i) The NMI Checksum, a single numeral used to assist with data validation when the *NMI* is manually entered into a computer system.
  - (ii) The NMI Datastream suffix used to identify a particular Datastream associated with a *connection point*.
- (c) The base *NM*/is ten characters. In some circumstances the NMI Checksum is appended to the *NM*/ to form an eleven-character *NM*/, or the two-character NMI Datastream suffix may be appended to form a twelve-character *NM*/. The NMI Checksum is not used with the Datastream suffix because the Datastream suffix is intended for use only with electronic data transfer.
- (d) All *NMIs* issued for *connection points* which become contestable after 1 January 2001 are required to be all numeric.
- (e) The all-numeric requirement applies to the basic ten character *NMI*, and not to other suffixes used with the identifier.
- (f) *Connection points* that were contestable prior to 1 January 2001 were allocated with an alphanumeric *NMI*.
- (g) TNSPs may continue to allocate alphanumeric NMIs from NMI blocks supplied to them prior to 1 January 2001. Wholesale<u>and bulk supply</u> connection points (LR = POOL<u>\*</u>) will continue to have alphanumeric NMIs issued.

## 4. NMI REGISTERS

LNSPs and ENMs must maintain a register of *NMIs* assigned by them to *connection points* or *child connection points*.

## 5. NMI CHECKSUM

- (a) To reduce the occurrence of incorrect transfers attributable to NMI data entry errors, a one digit NMI Checksum has been implemented.
- (b) Sample java code for an implementation of the NMI Checksum is provided in Appendix A. A general form of the algorithm used to create the NMI Checksum is:
  - (i) Double the ASCII value of alternate digits beginning with the right-most digit.
  - (ii) Add the individual digits comprising the products obtained in sub-paragraph (i) to each of the unaffected ASCII value digits in the original number.
  - (iii) Find the next highest multiple of 10.
  - (iv) The check digit is the value obtained in sub-paragraph (ii) subtracted from the value obtained in sub-paragraph (iii). If the result of this subtraction is 10, the check digit is 0.
- (c) Appendix D provides a worked example of the algorithm and a list of thirty *NMIs* with NMI Checksums calculated by the algorithm.
- (d) The NMI Checksum is always a numeric character.

Doc Ref:

6 February 20221 December 2017

Page 8 of 36



- (e) The NMI Checksum is not mandatory when transferring NMI identified data electronically between Participants. It is focussed on applications where data entry occurs and there is a risk of character transposition, for example, from paper to electronic systems or through an interactive telephone service.
- (f) When publishing a *NMI* for End Users, the *NMI* will appear in its 11-character format, and the NMI Checksum will be the final character of the *NMI*.

#### 6. DATASTREAM SUFFIX

#### 6.1. General

- (a) Settlements relies on the collection and delivery of large volumes of metering data. For any particular connection point there could be multiple energy measurement elements and data recorders with multiple channels. Accurate identification of Datastreams is essential. The Datastream suffix provides identification at the measurement element level for all Datastreams from the connection point identified by the NMI.
- (b) The Datastream suffix is a two-character identifier used in conjunction with a NM/ to identify a particular Datastream. It allows differentiation of measurement quantities at a *metering point*, and differentiation of quantities between different measurement elements or registers at a *connection point*.
- (c) A twelve-character *NMI* identifies the *connection point* (first ten characters) and associated Datastream (Datastream suffix as the last two characters).
- (d) The Datastream suffix has retained alphanumeric characters, even when both characters are numerals, because an all numeric structure could not accommodate the variety of data types or number of *meters* that could be required for a *connection point*.
- (e) The Datastream suffix is only used between Participants, and is not used in conjunction with the NMI Checksum. The Datastream suffix allows Participants to identify data at a sub-*connection point* level and to identify the individual sources of *metering data* to maintain necessary audit trails.

#### 6.2. Energy Direction Flows


The following conventions are used in the NEM.

- (a) All flows are specified by reference to their direction to or from the *market*. Hence:
  - (i) All *energy* from the *market* is considered export (i.e. *energy* consumed by an End User is export) (Export).
  - (ii) All *energy* into the *market* is considered import (i.e. the *energy generated* into the *market* is import) (Import).
- (b) AEMO shall define the import and export *energy* flows for *interconnectors* on a case-by-case basis.
- (c) For the purposes of MSATS, 'Net' *energy* is derived as: Net = Export Import
  - (i) Hence, the net *energy* for *generation* is negative (in a net quantity) and an End User's *energy* is positive (in a net quantity).
  - (ii) For Accumulation Meter Datastreams, this means that the *energy* values for import (*generation*) must be negative in the MDM Data File.

Doc Ref:

6 February 20221 December 2017

Page 9 of 36

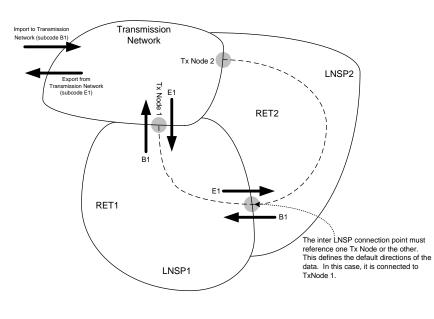

The same convention is used for kvarh, i.e.:

MSATS PROCEDURES: NATIONAL METERING IDENTIFIER

kvarh supplied to an End User are export kvarh; and

kvarh received from an End User are import kvarhs.

#### 7. DATASTREAM SUFFIX FOR INTERVAL METERING DATA

- (a) Interval metering data may be sourced from metering installations type 1 to 5 or 7 and noncontestable unmetered loads. Metering data from a type 6 metering installation that has been transformed through a profiling algorithm into TIs is also identified as interval metering data.
- (b) Interval metering data is identified in the Datastream suffix by a first character that is alpha [A to H, J to N, P to Z].
- (c) Identifiers in the 'Master' column in Table 1 are those normally used in the NEM. Where a check meter is required (type 1 & 2 metering installations), identifiers from the 'Check' column are used for the check meter. Where the data from the 'Master' and 'Check' metering installations has been averaged in accordance with the NER, the 'Ave' column identifiers are used. Where only the difference between import and export is required, the 'Net' column identifiers are used.

## **Commented [AEMO1]:** Delete – Net is defined in section 6.2.

#### Table 1 Datastream Suffixes for Interval Metering Data

Net Data Will Be Accepted. Net is N = (E-B).

	First character			Second character		
	Ave Master Check Net					
IMPORT kWh	А	В	С	Ν		
EXPORT kWh	D	E	F		Meter numbers or	
IMPORT kvarh	J	К	L	Х	measuring elements are to	
EXPORT kvarh	Р	Q	R		be 1-9 then A-H, J-N, P-Z	

Doc Ref:

6 February 20221 December 2017

Page 10 of 36

AEMO



	First character			Second character	
KVAh	S	Т	U		
Power Factor pF		G			
Q Metering Qh		Н	Υ		
Par Metering parh		М	W		
VOLTS (or V <sup>2</sup> h) or Amps (A <sup>2</sup> h)		V	Z		

(d) Where a *meter* has multiple measurement elements, the convention for the population of the second character of the Datastream Suffix is:

- (i) Increment the second character by one if the first character is the same. For example, use E1 and E2 if both elements are export kWh, and B1 and B2 if they are both import kWh.
- (ii) Use the same second character if the first character is different. For example, use E1 and B1 if they are export kWh and import kWh respectively.

#### Examples:

2727000011 E2 relates to Export kWh data from either meter no.2 (single element) or element 2 of meter no.1 (twin element) pertaining to the *connection point* with the *NMI* of 2727000011. Refer 11.4 and 11.5 for diagrammatic examples.

TTTTW00015 B1 relates to Import kWh *interval metering data* from meter no.1 pertaining to a wholesale *connection point* with the *NMI* of TTTTW00015.

#### 7.1. Datastream Suffix for Accumulated Metering Data

- (a) If the first character of the Datastream suffix is numeric [1 to 9] the attached data is *accumulated metering data* from a type 6 *metering installation*.
- (b) The Datastreams identified by characters 1 to 6 are active energy (kWh). Datastreams identified with 7, 8, or 9 are as defined by the LNSP or the ENM (as applicable).

#### Table 2 Datastream Suffixes for Accumulated Metering Data

First Character		Second Character
1	First Datastream	Meter numbers are to be 1-9 then A-H, J-N,
2	Second Datastream	P-Z.
3	Third Datastream	
4	First controlled load Datastream	
5	Second controlled load Datastream	
6	Third controlled load Datastream	
7	First LNSP/ENM defined Datastream	
8	Second LNSP/ENM defined Datastream	
9	Third LNSP/ENM defined Datastream	

#### Examples:

8877886644 1A relates to consumption energy data from meter A (the 10<sup>th</sup> meter at the *metering installation*), register 1 applicable to a *connection point* with the *NMI* of 8877886644.

Doc Ref:

6 February 20221 December 2017

Page 11 of 36



8866448877 43 relates to consumption energy data from a controlled circuit register in the 3rd meter at the installation, the data pertaining to a *connection point* with the *NM*/ of 8866448877.

#### 7.2. Wholesale and Bulk Supply Connection Points

- (a) A wholesale or bulk supply connection point is a <u>transmission network</u> connection point where:
   LR = POOL\* (where the "\*" is a wildcard for the region)
- (b) For a wholesale or bulk supply connection point a NMI must be assigned to each individual physical or logical metering point that contributes to the wholesale or bulk supply connection point. This requirement is to facilitate a drill down to Datastreams where AEMO is obliged to audit or otherwise investigate energy flows for a wholesale or bulk supply connection point.
- (c) AEMO assigns the *NMIs* for *regulated interconnectors*.
- (d) When the *metering point* doesn't align with the physical *connection point*, the *NMI* for the *connection point* is used to identify a logical *metering point*. Each *metering point* that contributes to the logical *metering point* must be assigned a separate *NMI*. The TNSP is responsible for determining the algorithm used to relate the logical *metering point* for a physical connection to the *metering point(s)* that contribute data for the physical connection.
- (e) Any Participant intending to apply a logical *meter* to a *connection point* must contact AEMO's Registration Desk to seek approval prior to entering any data into MSATS.

#### 8. CONNECTION POINTS WITH CHECK METERING

- (a) For *connection points* with a type 1 *metering installation*, the *NMI* must be assigned to every averaged *energy* flow pertaining to each *connection point*.
- (b) A type 1 *metering installation* requires a duplication of metering, voltage and current sources in accordance with the NER. The Datastreams from one *metering installation* are designated 'Master' and from the other *metering installation* are designated 'Check'.<sup>1</sup>
- (c) When both Datastreams are from measurement systems of identical accuracy standards, the NER require that the *energy* Datastream submitted for *settlements* be the average of the values from the master *meter* and *check meters*. In this case the Datastream suffixes will have an initial character A (import) or D (export) or N (net).
- (d) If the *check meter* is of a lower accuracy standard than the *metering installation*, only the 'Master'<sup>1</sup> Datastream is submitted, in which case the Datastream suffixes will have an initial character B (import) or E (export) or N (net).
- (e) The NER requires that a type 2 metering installation has partial check metering. The obligations for partial check metering can be met by a check meter, in which case the Datastreams will be identified as for a type 1 metering installation.
- (f) Alternatively, the arrangement of a partial *check metering* may be as agreed between AEMO and the MC. In a partial *check metering* scheme each Datastream used needs to be separately identified. It is possible that a number of *NMIs* will be used in a partial *check metering* scheme to identify logical metering points, and a particular meter and instrument transformer combination may be a component of more than one partial *check meter*. The actual arrangements will be part of the scheme submitted by the MC to AEMO for approval.

<sup>1</sup> Refer to Table 1.

Doc Ref:

6 February 20221 December 2017

Page 12 of 36



## 9. NMI RULES

#### 9.1. NMI Allocation and Verification

- (a) All *NMIs* must be allocated to End User *connection points* by LNSPs or ENMs (as applicable) and:
  - (i) The LNSP must verify that the *NM*/ is correctly associated with the TNI in MSATS.
  - (ii) The ENM must verify that the *NM*/is correctly associated with the correct *embedded network* and Parent NMI, and have the same TNI Code as the Parent NMI in MSATS.
- (b) When an *Embedded Generator* registers as a *Market Generator* and AEMO determines that a *virtual transmission node* is required for the *Embedded Generator*, AEMO will provide an appropriate TNI to the LNSP and the LNSP must assign this TNI to the *Embedded Generator connection point*.
- (c) When a *Generator* with one or more *generating units* within an *embedded network* registers as a *Market Generator* in respect of those *generating units* and AEMO determines that a *virtual transmission node* is required for those *generating units*, AEMO will provide the appropriate TNI to the ENM and the ENM must assign this TNI to the *Generator* Child NMIs.

#### 9.2. NMI Extinction

- (a) A *NMI* must be recorded as extinct in the *metering register* only when:
  - (i) a *connection point* is abolished;
  - (ii) the *connection point* changes from the LV to the HV side of the service *transformer*,
  - (iii) a child connection point becomes directly connected to the LNSP's network;
  - a connection point directly connected to the LNSP's network becomes an off-market embedded network connection;
  - (v) a *connection point* directly connected to the LNSP's *network becomes a child connection point;* or
  - (vi) the physical location of a *connection point* changes.
- (b) The only circumstance where a *NMI* may be re-used is when a *NMI* allocated to a builder's temporary *supply* is used for the permanent *supply* once construction is completed, provided:
  - (i) the final *supply* arrangements have the same effective *connection* arrangement to the local *network*, and
  - (ii) the temporary *supply* is abolished when the permanent *supply connection* is energised.
- (c) Subject to section 9.2(a) and (b), a *NMI* must not be recorded as extinct on the *metering register* for any of the following reasons:
  - (i) a change of End User;
  - a reconstruction of the End User *supply* connection (e.g. overhead moving to underground) in which the two services are not concurrently operational;
  - (iii) a consolidation of *meters* (e.g. 3 *meters*  $\rightarrow$  2 *meters*) or a relocation of the *meter* enclosure without changes being made to the location of the measurement *transformers*:
  - (iv) changes to Participant IT systems, including ENM and LNSP NMI allocation systems;
  - (v) changes to Network Tariffs;
  - (vi) changes to LNSP *network* boundaries; and

Doc Ref:

6 February 20221 December 2017

Page 13 of 36



(vii) changes to the identity of the ENM.

## 9.3. Utilisation of NMI for AEMO Data

#### 9.3.1. Data Delivery to AEMO (MSATS System)

(a) Metering data is always provided on an individual NM/ Datastream basis.

(b) Interval metering data is always provided as net energy flow to MSATS.<sup>2</sup>

**Commented [AEMO2]:** Delete, covered in MDP SLP clauses 3.7.1(e) and 3.12.4.

<sup>2</sup>-See section 6.1 for details of the conventions for the direction of *energy* flows.

Doc Ref:


6 February 20221 December 2017

Page 14 of 36




## APPENDIX A. EXAMPLES OF NMI APPLICATION - INTERVAL METERING DATA

Key to symbols used in Appendix A and Appendix B:

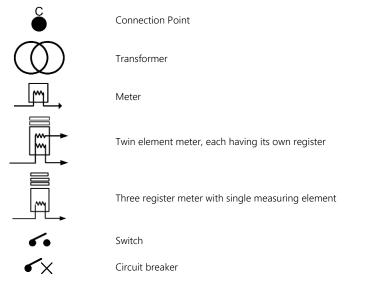

## A.1 One End User metered on the secondary side of transformer

- One *connection point*
- One End User
- One *meter*/measurement element
- One *NMI*

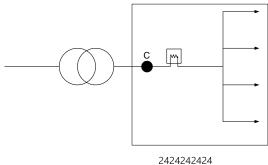

- Allocated NMI:
- Identity of interrogated metering data.

2424242424 E1








## A.2 One End User, multiple metered on the secondary side of transformer

- One connection point
- One End User
- Four *meters*/measurement elements
- One *NM*/

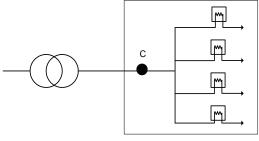


- Allocated NMI:
- Identity of individual interrogated metering data.

3131313131	
3131313131	E1
3131313131	E2
3131313131	E3

3131313131 E4

## A.3 One End User, previously two tariff metering, e.g. general supply & offpeak on secondary side of transformer

- One *connection point*
- One End User
- Two meters/measurement elements
- One *meter* with a load control device
- One *NMI*



- Allocated NMI:
- Identity of individual interrogated metering data.

5656565656

5656565656 E1 5656565656 E2




6 February 20221 December 2017

Page 16 of 36



## A.4 One End User, two controlled loads, one twin element meter

- One connection point
- One End User
- Two meters: one twin element with a Controlled Load and one single element with a Controlled Load
- One *NMI*

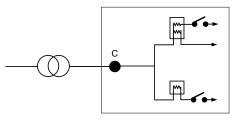

Allocated NMI:


5656565656

• Identity of individual interrogated metering data.

5656565656 E1 5656565656 E2 5656565656 E3

## A.5 One End User, two twin element meters

- One connection point
- One End User
- Two twin element *meters*
- One *NMI*



- Allocated NMI:
- Identity of individual interrogated metering data.




Doc Ref:



A.6 One End User, multiple meters on secondary side of multiple transformers in the same substation building an LV switchboard in common switchroom

- One *connection point*
- One End User
- Three meters/measurement elements
- One NM/

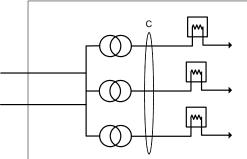


- Allocated NMI.
- Identity of individual interrogated metering data.

5656565656 5656565656 E1 5656565656 E2

5656565656 E3

A.7 Three End Users, metered on secondary side of multiple transformers in the same substation building

- Three *connection points*
- Three End Users
- One meter/measurement element per connection point
- Three *NMIs*

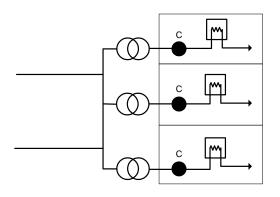


Doc Ref:



•	Allocated <i>NMIs</i> .	5656565656 5656565657 5656565658
•	Identity of individual interrogated <i>metering data</i> .	5656565656 E1 5656565657 E1 5656565658 E1

# A.8 One End User, two separate HV supplies to two separate substations, both metered on secondary side of the transformers

- Two LV connection points
- One End User
- One *meter*/measurement element per *connection point*
- Two *NMIs*

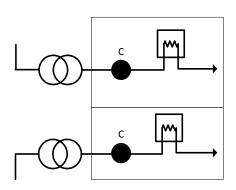


- Allocated NMIs.
- Identity of individual interrogated metering data.



5656565656 E1 5656565657 E1



- A.9 One End User, two separate substations adjacent to each other or one single substation with two separate transformers in a single substation, with a "normally open" point separating the HV supplies into two sources
- Two connection points
- One End User
- One meter/measurement element per connection point
- Two *NMIs*

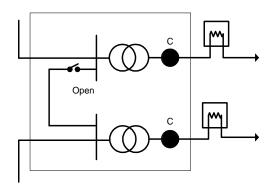


Allocated NMIs.

• Identity of individual interrogated metering data.

5656565656 5656565657 5656565656 E1

- 5656565657 E1
- A.10 One End User, two separate substations adjacent to each other or one single substation with two separate transformers, with the HV supply originating from a single source
- Two connection points
- One End User
- One meter/measurement element per connection point
- Two *NMIs*




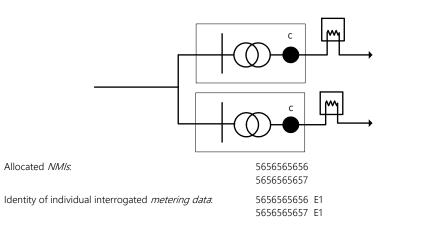

## A.11 One End User, two separate substations not adjacent to each other but on same premises

- Two connection points
- One End User
- One *meter*/measurement element per *connection point*
- Two NMIs

•

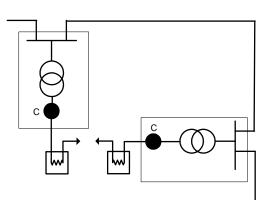

- Allocated NMIs.
- Identity of individual interrogated *metering data*.


5656565656 5656565657

5656565656 E1 5656565657 E1



## A.12 Multiple End Users, High rise building

- Multiple *connection points*, with all deemed to be at physical *connection point* c in the diagram.
- Five individually metered End Users
- One *meter*/measurement element per *connection point*
- Five *NMIs*

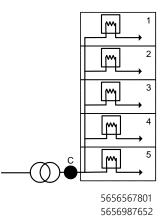

- Allocated NMIs.
- Identity of individual interrogated metering data.


5656567801 E1 5656987652 E1 5656000043 E1 5656000044 E1 5656000045 E1

5656000043 5656000044 5656000045



## A.13 One End User with multiple supply points

- Two connection points
- One End User
- One *meter*/measurement element per *connection point*
- Two *NMIs*.
- There are two separate *connection points*, therefore, two separate *NMIs* irrespective of whether the DLFs and supplying TNIs are the same.

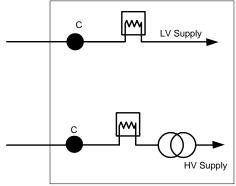

- Allocated NMIs.
- Identity of interrogated metering data.


8899778999 8899123456

8899778999 E1 8899123456 E1



## A.14 One End User with Standby Supply

- Two connection points
- One End User
- One *meter*/measurement element per *connection point*
- Two NMIs
- There are two separate *connection points*, therefore, two separate *NMIs* irrespective of whether the DLFs and supplying TNIs are the same.

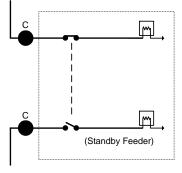

- Allocated NMIs.
- Identity of interrogated *metering data* is:


5656333322 5656444441 5656333322 E1 5656444441 E1

Doc Ref:



## A.15 One End User or Participant, Wholesale Metering at Transmission Node

- One connection point
- One End User or Participant
- Five *meters* (one *meter/measurement* element per *metering point*, with summated *transformer check metering*). Four of the *meters* are official billing *meters*, the other *meter* is for data checking and validation purposes.
- Five *NMIs*

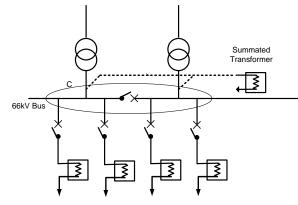

Allocated NMIs.

VVVVW00001
 VVVVW00002
 VVVVW00004
 VVVVW00005
 VVVVW00002 E1
 VVVVW00003 E1
 VVVVW00004 E1
 VVVVW00005 F1

## A.16 One End User or Participant, Wholesale Metering at Transmission Node

- One *connection point*
- One End User or Participant

Identity of individual interrogated metering data.


- One physical *meter*/measurement element installed at different location to the wholesale boundary *connection point*.
- One logical *meter*/measurement element. The logical *meter* corrects the physical *meter* for *transmission line* and *transformer* (T/F1) losses.
- Two NMIs. Only the logical meter is recorded against the connection point in MSATS.

Doc Ref:

6 February 20221 December 2017

Page 25 of 36



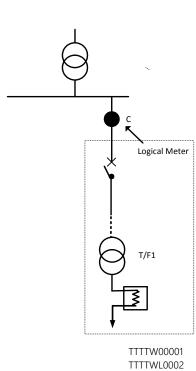

- Allocated NMIs.
- Identity of individual interrogated metering data.

TTTTWL0002 TTTTW00001 E1 TTTTWL0002 E1


The audit trail of the logical *meter* is maintained through the algorithm and its reference to *metering data* from the physical *meter*.

The use of a logical *meter* must be approved by AEMO.

## A.17 One End User, Wholesale Metering at Transmission Node

- One connection point. This is a type1 metering installation at a wholesale boundary point.
- One End User
- Two *meters*/measurement elements
- One NMI. The NMI is assigned to the metering point.



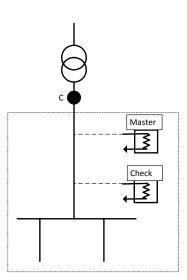


Allocated NMI:

TTDDW00015

Identity of individual interrogated *metering data*.
 Master *meter* (Import) TTDDW00015 B1
 *Check meter* (Import) TTDDW00015 C1

## A.18 Street Lighting (Type 7 Metering Installation)


- Multiple unmetered connections, one market connection point.
- One End User.
- One type 7 *metering installation*.
- One NMI.
- All lamps are supplied from a single *transmission* node.
- All lamps have the same TNI, DLF, FRMP and LNSP.



Doc Ref:

6 February 20221 December 2017

Page 27 of 36





• Allocated NMI:

5555565656

• Identity of individual interrogated *metering data*.


5555565656 E1



## APPENDIX B. EXAMPLES OF NMI APPLICATION - ACCUMULATED ENERGY DATA

#### B.1 Single Meter with Single Datastream

• Only one Datastream available, identified by 11. Only one Datastream, denoted by first character 1, and only one *meter* denoted by second character 1.




Allocated NMI:

5656565656 11

• Identity of individual interrogated *metering data*.

## B.2 Two Meters each with Single Datastream

• The Datastream from the first *meter* is identified by 11, and from the second *meter* by 12.

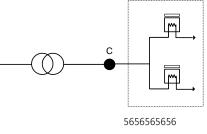


- Allocated NMI:
- Identity of individual interrogated metering data.



### B.3 Two Meter Installation, One Meter Recording Consumption for a Controlled Load

- The data for *meter* one is from the first Datastream, hence suffix 11.
- The data for meter two is from the first Controlled Load Datastream, hence suffix 42.




- Allocated NMI:
- Identity of individual interrogated metering data.



#### B.4 Three Datastream, One Meter with Single Measurement Element

- The *meter* has a three-rate Datastream (high, shoulder, and low rates). As there is only one *meter*, each of the suffixes will have the final character set to 1 to denote that the *metering data* has originated from the same *meter*.
- Each Datastream is numbered as the reader loads *metering data* from them for a mechanical threerate Datastream, from top to bottom, or left to right, and for an electronic Datastream in the order in which they scroll.




- Allocated NMI:
- Identity of individual interrogated metering data.
- 5656565656 11 5656565656 21 5656565656 31

5656565656

### B.5 Multi-function Meter

- Multi-function *meter* with two measurement elements.
- Each measurement element has a single *energy* Datastream, which requires two data suffixes. As there is only one *meter*, each of the suffixes will have the final character set to 1 to denote that the *metering data* has originated from the same *meter*. The Controlled Load data will be denoted by a 41 as originating from the first Controlled Load Datastream, and the continuous circuit will be denoted by 11.




- Allocated NMI:
- Identity of individual interrogated metering data.
- 5656565656
- 5656565656 11 5656565656 41



## B.6 Two Multi-function Meters

• Two multi-function *meters* where the controlled circuits have the same switching control.



• Allocated *NMI*: 5656565656

•	Identity of individual interrogated metering data (meter 1):	5656565656 11 5656565656 41
•	Identity of individual interrogated metering data (meter 2):	5656565656 12 5656565656 42

Doc Ref:



## APPENDIX C. SAMPLE JAVA CODE FOR NMI CHECKSUM

```
/**
* Calculates a LUHN-10.
* <PRE>
* 1. Double the value of alternate digits beginning with the rightmost digit
^{\ast} 2. Add the individual digits comprising the products obtained in step 1 to
* each of the unaffected digits in the original number.
^{\star} 3. Find the next highest multiple of 10
* 4. The check digit is the value obtained in step 2 subtracted from the value
* obtained in step 3.
* 5. END
* </PRE>
*/
public class LUHN10
{
 /**
 * Value to indicate we have not calculated the luhn yet.
 */
 private static final int NULL_VALUE = -1;
 /**
 * Buffer holding the sequence of digits to use in the calculation.
  */
 private StringBuffer _buffer;
 /**
 * The cached value for the luhn.
  */
 private int _luhn;
 /**
 * Constructor.
  */
 public LUHN10()
 {
  reset();
 }
 /**
  * Resets the calculator to its initial values.
  */
 public void reset()
 {
  _buffer = new StringBuffer();
  _luhn = NULL_VALUE;
 }
 /**
 * Updates the LUHN-10 with specified digit.
  */
```

Doc Ref:

6 February 20221 December 2017

Page 32 of 36



```
public void update(char d)
{
 // Append the character
 _buffer.append(d);
 // And, reset the cached luhn
 _luhn = NULL_VALUE;
}
/**
* Returns the current LUHN-10 value.
*/
public int getValue()
{
 if (_luhn == NULL_VALUE)
 {
  int v = 0;
  boolean multiply = true;
  for (int i = buffer.length(); i > 0; i--)
  {
   int d = (int)_buffer.charAt(i - 1);
   if (multiply)
   {
    d *= 2;
   }
   multiply = !multiply;
   while (d > 0)
   {
    v += d % 10;
    d /= 10;
   }
  }
  _luhn = (10 - (v % 10)) % 10;
 }
 return _luhn;
}
public static void main(String[] args)
{
 if (args.length == 0)
 {
  System.out.println("USAGE: LUHN10 nmi");
 }
 else
 {
  LUHN10 luhn = new LUHN10();
  String nmi = args[0];
```

Doc Ref:

6 February 20221 December 2017

Page 33 of 36



```
for (int j = 0; j < nmi.length(); j++)
{
    luhn.update(Character.toUpperCase(nmi.charAt(j)));
}
System.out.println(nmi + "/" + luhn.getValue());
}</pre>
```

#### APPENDIX D. EXAMPLE OF NMI CHECKSUM CALCULATION

This Appendix contains a worked example of the NMI Checksum calculation. An alphanumeric *NMI* is used in the example to illustrate the algorithm's ability to handle all characters that have an ASCII equivalent.

The logic of the algorithm can be summarised as:

Process each character in the *NMI* individually, starting with the right most. For each character:

- (a) Convert the character to its ASCII value
- (b) For the right most character and every second character reading left, double the ASCII value obtained in Step (a).
- (c) Add the individual digits of the ASCII value to a register holding the total added value for the NMI Checksum.

Subtract the total added value register from the next highest multiple of 10. If the result is 10, the checksum is 0, otherwise the result is the NMI Checksum.

The NMI for the following worked example is: 1234C6789A

Step 1. Initialise variables used by the process.

Double\_This\_Char

is a boolean that indicates whether the character currently being processed should be doubled.

Char

}

is the character currently being processed as it appears in the NMI.

ASCII\_Char is the ASCII value of Char

Total

is the running sum of the digits generated by the algorithm.

NMI Checksum

is the final result. At the start of the process:

Double\_This\_Char = True

because the right most character, and then every second character, is doubled by the algorithm.

Total = 0

Checksum = NULL

Step 2. Read the *NMI* character by character, starting with the right most character.

Doc Ref:

6 February 20221 December 2017

Page 34 of 36





Char = A Step 3. Convert the character to its ASCII value. ASCII\_Char = 65 Step 4. Double the ASCII value if the character is the right most of the *NMI* or an alternate. ASCII\_Char = 130 Double\_This\_Char = Not Double\_This\_Char Step 5. Add the individual digits of the ASCII value to the Total After. Total = Total + 1 + 3 + 0 (i.e. Total = 4)

MSATS PROCEDURES: NATIONAL METERING IDENTIFIER



Performing steps 2 to 5 for each character in our example *NMI* gives the following results:

Table 3 Example NMI Results							
Character	Total Before	ASCII Value	Double?	Doubled Value	Total After		
А	0	65	Υ	130	4 (0+1+3+0)		
9	4	57	Ν	57	16 (4+5+7)		
8	16	56	Υ	112	20 (16+1+1+2)		
7	20	55	Ν	55	30 (20+5+5)		
6	30	54	Υ	108	39 (30+1+0+8)		
С	39	67	Ν	67	52 (39+6+7)		
4	52	52	Υ	104	57 (52+1+0+4)		
3	57	51	Ν	51	63 (57+5+1)		
2	63	50	Υ	100	64 (63+1+0+0)		
1	64	49	Ν	49	77 (64+4+9)		

The value of 'Total After' processing the NMI is 77.

The next highest multiple of 10 is 80.

Checksum = 80 -77 = 3.

#### Further examples: NMIs and Associated Checksums

The following thirty NMI Checksums were calculated by AEMO from the *NMIs* listed in Table 4. The *NMIs* and NMI Checksums are provided to assist Participants in checking their implementation of the NMI Checksum algorithm.

NMI	NMI Checksum	NMI	NMI Checksum
2001985732	8	QAAAVZZZZZ	3
2001985733	6	QCDWW00010	2
3075621875	8	SMVEW00085	8
3075621876	6	VAAA000065	7
4316854005	9	VAAA000066	5
4316854006	7	VAAA000067	2
6305888444	6	VAAASTY576	8
6350888444	2	VCCCX00009	1
7001888333	8	VEEEX00009	1
7102000001	7	VKTS786150	2
NAAAMYS582	6	VKTS867150	5
NBBBX11110	0	VKTS871650	7
NBBBX11111	8	VKTS876105	7
NCCC519495	5	VKTS876150	3
NGGG000055	4	VKTS876510	8

Doc Ref: